


# MT8000 O.S image release note

## MT6000/8000T O.S image 2008/10/13


1. System Setting add O.S image upgrade function.

Copy new O.S image to USB stick or CF card, insert to HMI.


Click O.S image upgrade, select the new O.S image folder click.

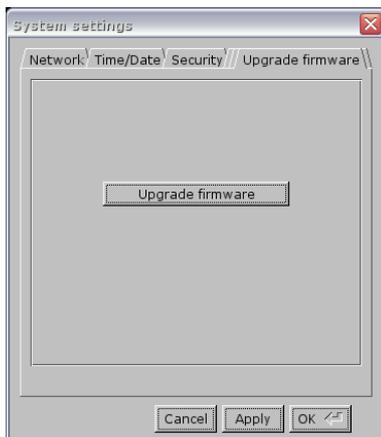

2. System information/Version add HMI type.

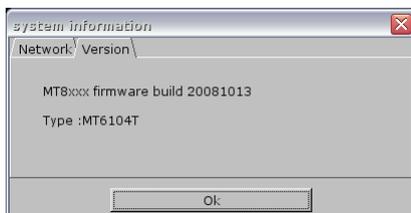

3. Add check box "Popup download window", "Restart after download/upload" for USB stick insert to HMI.

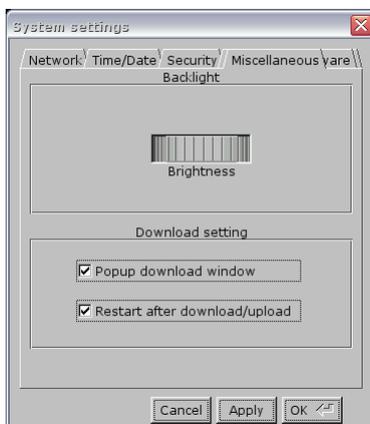

4. Use LB9020 to control system bar on HMI

LB9020 Show (set ON) / hide (set OFF) system setting bar.

## MT8000X O.S image 2008/10/20

VNC function

1. Enable VNC server and set login password.



2. Install Java for Internet Explorer or install VNC viewer.

Java web site

<http://java.com>

VNC viewer :

[ftp://ftp.weintek.com/MT8000/utility/vnc-4\\_1\\_2-x86\\_win32\\_viewer.zip](ftp://ftp.weintek.com/MT8000/utility/vnc-4_1_2-x86_win32_viewer.zip)

VNC viewer for Pocket PC :

<ftp://ftp.weintek.com/MT8000/utility/zoomVNC.CAB>

<http://zoomvnc.com/>

3. Open Internet Explorer, enter HMI IP : <http://192.168.1.28>



Enter HMI IP address click OK. Enter Password.



Note:

- Only available for one user to log in to VNC at the same time.
- HMI will reject VNC connection after an hour no operation.
- X series include T series new features but T series does not support VNC feature.