

## 22.26 Disable PLC No Response Dialog Box

Address	Description	Read/Write Control		
		Local HMI	MACRO	Remote HMI
LB-9192	disable USB 1 PLC's "PLC No Response" dialog (when ON)	R/W	R/W	R/W
LB-9195	disable USB 2 PLC's "PLC No Response" dialog (when ON)	R/W	R/W	R/W
LB-11960	disable PLC 1's "PLC No Response" dialog (when ON)	R/W	R/W	R/W
LB-11961	disable PLC 2's "PLC No Response" dialog (when ON)	R/W	R/W	R/W
LB-11962	disable PLC 3's "PLC No Response" dialog (when ON)	R/W	R/W	R/W
LB-11963	disable PLC 4's "PLC No Response" dialog (when ON)	R/W	R/W	R/W
LB-11964	disable PLC 5's "PLC No Response" dialog (when ON)	R/W	R/W	R/W
LB-11965	disable PLC 6's "PLC No Response" dialog (when ON)	R/W	R/W	R/W
LB-11966	disable PLC 7's "PLC No Response" dialog (when ON)	R/W	R/W	R/W
LB-11967	disable PLC 8's "PLC No Response" dialog (when ON)	R/W	R/W	R/W