

Configurazione LAN

Definire l'IP del router ed abilitare il DHCP server per i dispositivi che si conatteranno alla rete WiFi.

LTE router LR77 v2 Libratum

Status	Primary LAN Configuration
General	DHCP Client: disabled
Mobile WAN	IP Address: 192.168.1.1
WiFi	Subnet Mask: 255.255.255.0
WiFi Scan	Default Gateway:
Network	DNS Server: 8.8.8.8
DHCP	Bridged: yes
IPsec	Media Type: auto-negotiation
DynDNS	<input checked="" type="checkbox"/> Enable dynamic DHCP leases
System Log	IP Pool Start: 192.168.1.2
	IP Pool End: 192.168.1.254
	Lease Time: 600 sec
	<input type="checkbox"/> Enable static DHCP leases
	MAC Address: IP Address:

Configurazione WiFi

LTE router LR77 v2 Libratum

Status	WLAN Configuration
General	<input checked="" type="checkbox"/> Enable WLAN interface
Mobile WAN	Operating Mode: access point (AP)
WiFi	DHCP Client: disabled
WiFi Scan	IP Address:
Network	Subnet Mask:
DHCP	Bridged: yes
IPsec	Default Gateway:
DynDNS	DNS Server:
System Log	<input type="checkbox"/> Enable dynamic DHCP leases
	IP Pool Start:
	IP Pool End:
	Lease Time: 0 sec