


IT 1300g

Hand-held bar code scanner

en 01-2011/08 50116932



Dimensioned drawing

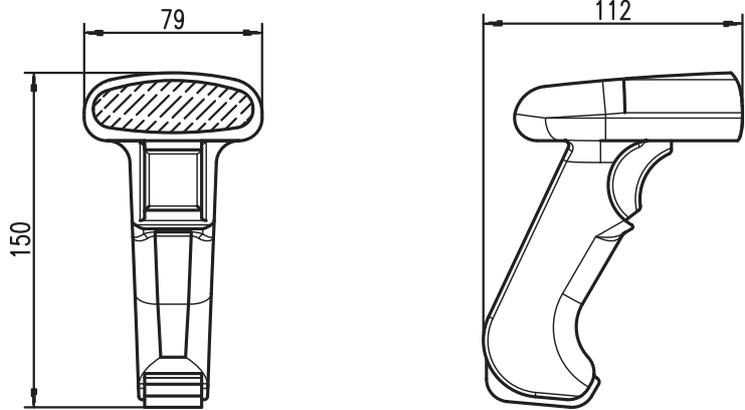

- Hand-held scanner for bar codes
- Large reading field for the detection of codes
- Robust trigger button
- Built-in decoder
- Read-display
- RS 232, USB and PS/2 interface
- Operating temperature from 0 through 50°C
- Protection class IP 41

Electrical connection

for RS 232 cable

9-pin Sub-D	Signal	Connection for power supply unit	IT 1300g RJ41
2	TXD		4
3	RXD		5
5	GND	external	3
7	CTS		6
8	RTS		8
9	5VDC	internal	7

for USB cable

USB type A	Signal	IT 1300g RJ41
1	5VDC	7
2	Data -	10
3	Data +	9
4	GND	3

for PS/2 cable

Mini DIN connector	Mini DIN socket	Signal	IT 1300g RJ41
1	-	PC Data	4
2	2	NC	
3	3	GND	3
4	4	5VDC	7
5	-	PC Clock	5
6	6	NC	
-	1	KB Data	8
-	5	KB Clock	6



Accessories

- **RS 232 cable**
part no. 50115105
- **TTL-RS 232 cable**
part no. 50114517
- **PS/2 cable**
part no. 50114519
- **USB cable, 3m**
part no. 50114521
- **USB helix cable, 5m**
part no. 50114523
- **Power supply unit**
part no. 50114525

We reserve the right to make changes • PAL_IT1300g_en.fm

Specifications

Electrical data

Operating voltage U_B 5VDC
 Power consumption max. 1W

Interfaces

Interface type RS 232, PS/2 and USB
 Trigger via button or serial command

Code types

Bar codes 2/5 Interleaved, Code 39, Code 128, Code 93, Codabar, UPC/EAN, GS1 Databar, Codablock

Optical data

Optical system 3648 linear Imager
 Contrast 20% (black/white)
 Light source integrated diffuse LED 630nm
 Read distance 10 ... 460mm (UPC 100%)
 Read angle various tilt and rotational angles up to 65°

Mechanical data


Housing UL94V0 grade
 Weight 160g (without cable)
 Dimensions 150x112x79mm
 Shock resistance 50 falls from a height of 1.5m

Environmental data

Ambient temp. (operation) -0°C ... +50°C
 Ambient temp. (storage) -40°C ... +60°C
 Relative air humidity 0 ... 95% (non-condensing)
 Protection class IP 41

Reading field

IT 1300g

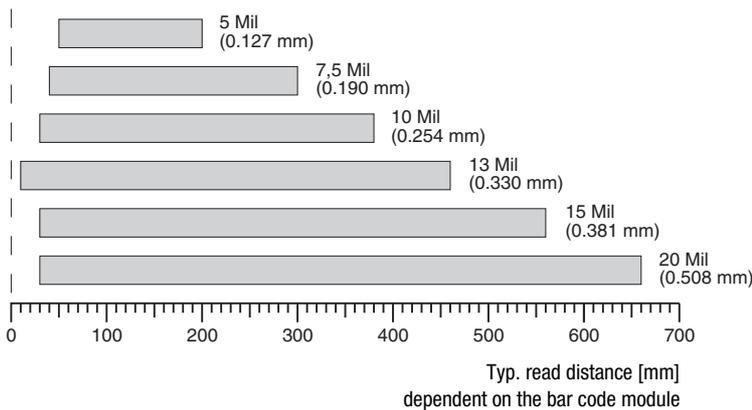

Order guide

Hand-held scanner for bar codes (standard range)

IT 1300g-2 IT 1300g with RS 232, KBW and USB interface

Part no.

50116864

Tables

Diagrams

Remarks

Ergonomically shaped hand-held scanner with integrated decoder for bar codes.
 Data transmission via configurable RS 232 interface.
 Or keyboard-wedge operation via PS/2 or USB interface.

Switching off the computer

Information on switching off and shutting down the connected computer - which must always be performed before connecting peripheral devices, such as a scanner - can be found in the appropriate operating instructions for your computer.

Connecting the IT 1300g

Shown in the adjacent figure are the individual steps for installing the cable on the scanner; these steps are described in the following.

1. To secure the interface cable to the scanner, proceed as follows: plug the RJ 41 connector into the socket on the bottom of the hand-held scanner.
2. Connect the interface cable to the appropriate connection socket on the computer.
3. You may need a power supply unit for supplying voltage; alternatively, you can use a cable which supplies voltage from the computer system. Use the pin assignments (see "Electrical connection" on page 1) to select the appropriate cable for your application.
4. Connect the power supply unit to the power socket (not necessary if voltage is supplied from the computer).
5. Use the code for the respective application to configure the hand-held scanner, see chapter "Configuration".
6. Check the operational readiness of the scanner by pointing the scanning surface towards a flat surface and pulling the trigger. A red target line should now be visible. Now scan a sample label. The scanner emits an audible signal to confirm that the label has been read; if necessary, the data are now passed on to the computer.



Cable latch

Configuration

The hand-held scanner can always be configured using bar codes. To do this, the bar code must first be selected on the package insert and then the trigger actuated in order to read the code. The configuration is then immediately accepted and executed.

Several of the most important configurations are listed in the following.

A second option is to configure the hand-held scanner with the USB and RS 232 interfaces with the aid of the **EZ-Config** PC program. You can download and install this program from our homepage at www.leuze.de. The program can be used to make settings and transfer them to the hand-held scanner. The configuration can also be stored so that it can be reused at a later time.

Further information on this can be found in the User's Guide for the IT 1300g.

The standard applications are described and summarised below.




Notice!

Additional information on the device and short instructions can be found on the Internet at www.leuze.de.

Resetting the IT 1300g to factory settings

To reset all parameters to factory settings, scan the adjacent bar code.

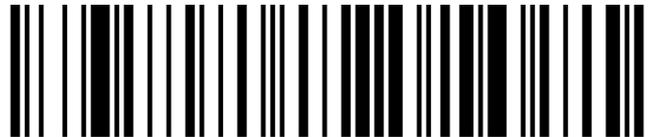

Attention!

All settings are lost!!!

You may then continue making settings or operation of the device.

Trigger

To activate the read process, a trigger signal is to be sent via the serial RS 232 interface or USB interface (COM port emulation only). The command is to be sent at the set baud rate, parity, and data and stop bits.

The command for activation is: **SYN T CR** ASCII decimal values: 022; 084; 013

To cancel read readiness, send a deactivation.

The command for deactivation is: **SYN U CR** ASCII decimal values: 022; 085; 013

Following a successful read operation, the IT 1300g deactivates itself.

The second option is activation via the built-in trigger button.

Configuration for the Leuze standard protocol


To set the Leuze standard protocol, you must first reset the scanner to factory settings and then individually define each of the transmission parameters using a bar code

Procedure:

1. Scan the adjacent bar code.

The IT 1300g is reset to factory settings.

2. Successively scan the 4 bar codes shown below. Each read operation is confirmed by a beep.

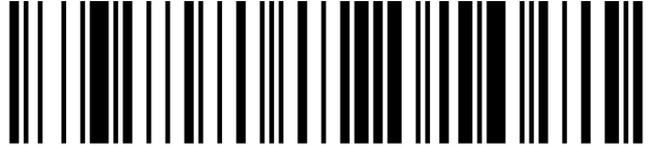

The IT 1300g is set to the following transmission parameters: RS 232 transmission with 9,600 baud, 8 data bits, 1 stop bit, no parity, prefix <STX>, terminators <CR><LF>.


9600 Bd



Terminal ID



Prefix STX

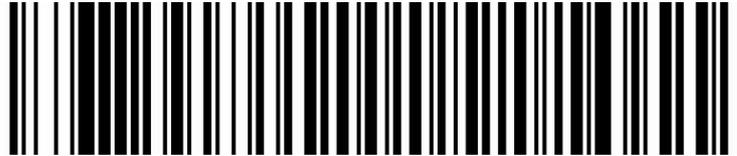

Postfix CR/LF




Connecting the IT 1300g to the serial interface

With voltage supply via PIN 9

required parts:


- 1x 50116864 IT 1300g-2
- 1x 50114517 TTL-RS 232 cable

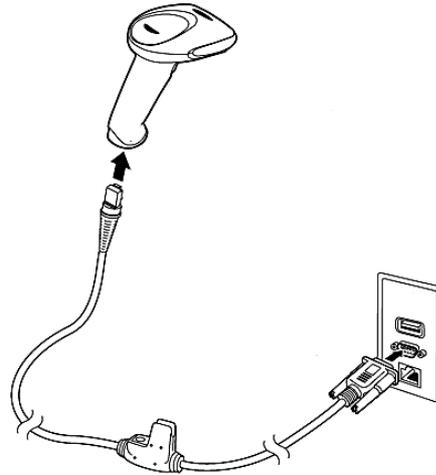

With voltage supply via power supply unit

required parts:

- 1x 50116864 IT 1300g-2
- 1x 50114517 TTL-RS 232 cable
- 1x 50114525 Power supply unit

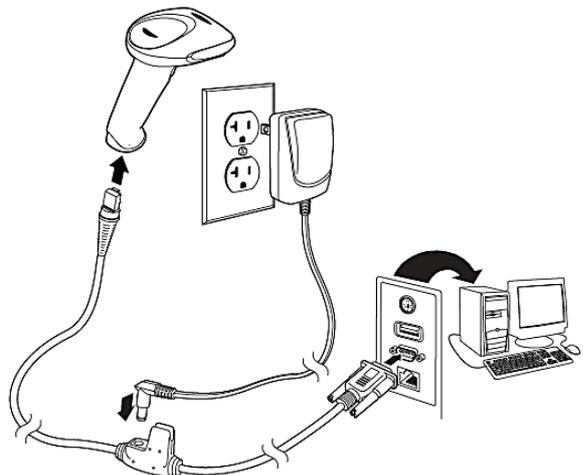

Procedure:

1. Switch off the PC.
2. Connect the interface cable to a free COM port (RS 232) on the computer, to the IT 1300g as well as to the power supply unit.
3. Switch the PC back on.
4. Scan the adjacent bar code.
The IT 1300g is set to the following transmission parameters:
RS 232 transmission with 9,600 baud, 8 data bits, 1 stop bit, no parity, terminators <CR><LF>.
5. If necessary, adjust the transmission parameters of the used COM port to those of the IT 1300g.



Attention!

We recommend connecting the IT 1300g directly to a PC or to the MA 21 or MA 41... connector units. If connecting to other components, please note that a voltage level range of -12 ... +12V is maintained on the data lines!

Connecting the IT 1300g to the MA 2xxirequired parts:

- 1x **50116864** **IT 1300g-2**
- 1x **50115105** **RS 232 cable**
- 1x **50113397** **KB JST-HS-300**
- 1x connector unit **MA 2xxi** for the corresponding fieldbus system:
 - 50112893** **MA 204i** for PROFIBUS or
 - 50112892** **MA 208i** for Ethernet or
 - 50112891** **MA 248i** for PROFINET

Procedure:


1. Connect the KB JST-HS-300 cable to the MA 2xxi.
2. Connect the interface cable to cable KB JST-HS-300.
3. Scan the adjacent bar code.

The IT 1300g is reset to factory settings.

4. Successively scan the 3 bar codes shown below. Each read operation is confirmed by a beep.

The IT 1300g is set to the following transmission parameters:

RS 232 transmission with 9,600 baud, 8 data bits, 1 stop bit, no parity, terminators <CR><LF>.

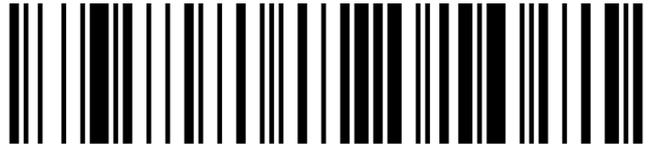

9600 Bd



Terminal ID



Postfix CR/LF




Connecting the IT 1300g to the PS/2 interface

The operation of the IT 1300g in keyboard emulation mode is described in this section. A PC keyboard is emulated in this operating mode. The data which are read in are written directly to the currently activated program. Thus, the data can be processed further in all standard programs.

required parts:


1x **50116864** IT 1300g-2

1x **50114519** PS/2 cable

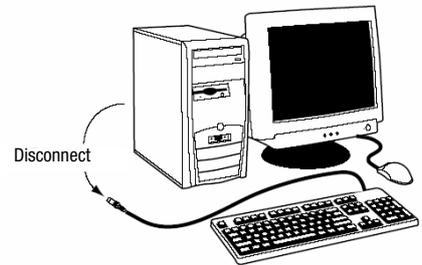

Procedure:

1. Switch off the PC.
2. Disconnect the keyboard.
3. Plug in the IT 1300g hand-held scanner between the keyboard and the PC.
4. Switch the PC back on.
5. Scan the bar codes shown below.

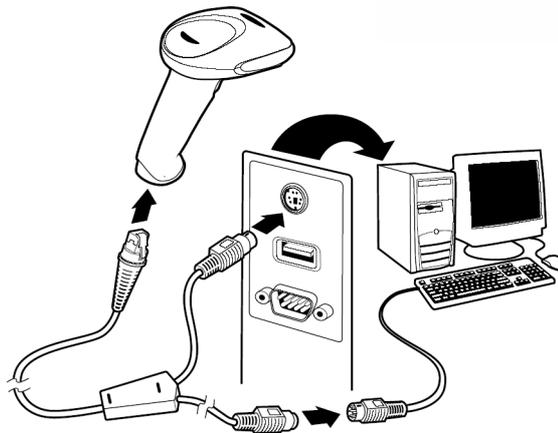

IBM PCs and compatible PCs, postfix



Keyboard layout for Germany/Austria



Connecting the IT 1300g to the USB interface (keyboard emulation)


The operation of the IT 1300g in keyboard-emulation mode on a USB port is described in this section. A PC keyboard is emulated in this operating mode. The data which are read in are written directly to the currently activated program. Thus, the data can be processed further in all standard programs.

required parts:

- 1x **50116864** IT 1300g-2
 - 1x **50114521** KB USB-1 IT190x (3m, straight)
- or
- 1x **50114523** KB USB-2 IT190x (5m, spiral)

Procedure:

1. Plug the IT 1300g hand-held scanner into a free USB port.
2. The scanner acknowledges this connection with a beep.
3. Scan the bar codes shown below.

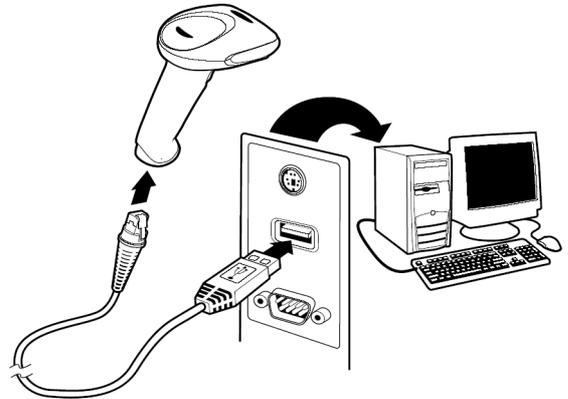

USB keyboard emulation with CR LF



Keyboard layout for Germany/Austria



Connecting the IT 1300g to the USB interface (COM-port emulation)


The operation of the IT 1300g as a serial interface on a USB port is described in this chapter. A COM interface is emulated in this operating mode. The data which are read in are sent to a new COM interface. The driver with which you emulate this COM interface can be downloaded from our homepage at www.leuze.de. Thus, the data can be processed further in programs which expect data via COM interfaces.

required parts:

- 1x **50116864** **IT 1300g-2**
- 1x **50114521** **KB USB-1 IT190x (3m, straight)**
- or
- 1x **50114523** **KB USB-2 IT190x (5m, spiral)**

Procedure:

1. Install the USB serial driver
(current version at www.leuze.com).
2. Plug the IT 1300g hand-held scanner into a free USB port.
3. The scanner acknowledges this connection with a beep.
4. Scan the bar code shown below.
5. Open a terminal program or your program for the serial interface, select the new COM port, and make the following settings: baud rate 38,400, 8 data bits, 1 stop bit, no parity, terminator <CR>.

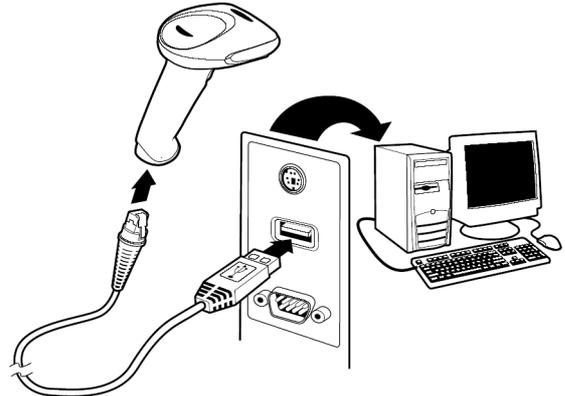

USB COM-port emulation

